


READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

⚠ WARNING:

- Use caution when walking on the product.
- Do not stand behind snowmobiles when loading/unloading.
- Always load snowmobiles at low speeds using extreme caution.

Recommend Tools					
Utility Knife	Clutch Power Drill	Tape Measure	Saw	Square	Screw Bit

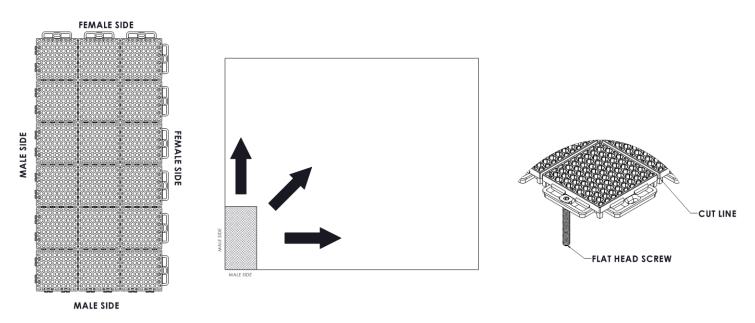

Installation:

- ProTech Flooring snaps together using male and female connections, male side snaps into the female side.
- It is recommended to install the tiles from left to right, back to front.
- Allow ½" gap for clearance between the edge of flooring and sidewall.
- Tiles can be cut using a knife blade or saw, tiles have predefined cut lines every 3".
- Optional: Flooring can be fixed to the sub-floor by using flat head screws hardware not inlcuded.
 - Suggested Hardware: One inch (1") #10 counter-sunk screws
- Optional Edge Kits are sold separately, visit our website at CaliberProductsInc.com.

CALIBER INC. LIMITED LIFETIME WARRANTY: Caliber, Inc. warrants that this product will be free from defects in material or workmanship under normal use installation and service. Caliber Inc. reserves the right, before having any obligation under this limited warranty, to inspect the damaged product. All warranty shipping costs for inspection shall be borne solely by the purchaser. This limited warranty is non-transferable.

DISCLAIMER: Caliber, Inc. shall not be liable for any special, incidental, or consequential damages, including, but not limited to, lost revenues, lost profits, personal injury, damage to property, and third-party claims, arising out of any warranty, contract, statutory or tort. Notwithstanding the term of any limited warranty or any warranty implied by law, or if any limited warranty fails in its essential purpose, in no event will Caliber's entire liability exceed the purchase price of this product.